 



Simple and Quick ! Data Input Guide

1. Download to Install

① Open NETEX1 Home Page by Google, or Yahoo Site



- ② Click "Course Download"
- ③ Input Serial Number and E-mail Address
- ④ Click "Log In"

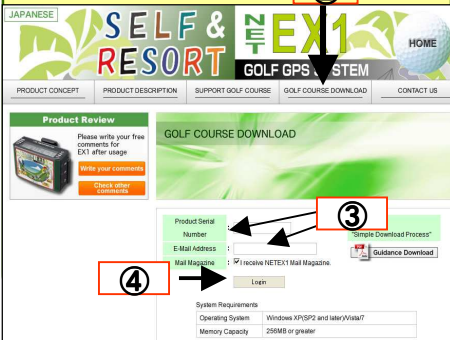

⑤ Click "Download"




Download Files – Warning for Security

⑥ Click "Run(R)" ❌

Internet Explorer – Warning for Security

⑦ Click "Run(R)" to start data download

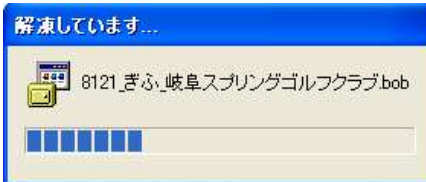

Install of Course Writer EX

- ⑧ Follow the guidance
- ⑨ Click "Yes" to load or rewrite all data
- ⑩ Push "Finish" to show "Golf Icon" at Desk Top

Please click "Support Golf Course" in EX1 home page to check your play course to enjoy the latest data !!!


2. Select of Desired Club

① Open Desk Top (Push "Windows Key" & "D")

② Double Click "Golf Icon" as shown



- ③ Select "LIST SEARCH" or "DIRECT NAME SEARCH" in the Display
- ④ Push ▼ button at selecting "LIST SEARCH"

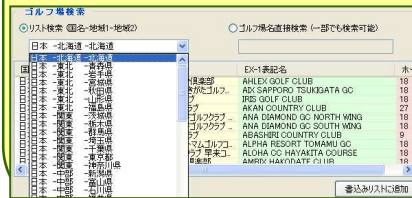

⑤ Select desired course in step ④ then push " ADD TO INPUT LIST" button to show the course name. Max 5 courses can be loaded



It takes about 5 minutes from "Download" to "Data Input to EX1"

3. Data Input to EX1 (All pre-loaded data is replaced by new input data)

① Switch EX1 OFF

② Connect PC and EX1 via USB cable



③ Change "START INPUT" button to Green color



④ Click "START INPUT"

- ⑤ Writing up to 5 courses
- ⑥ EX1 is ON to show display contents after finishing
- ⑦ Disconnect USB cable ❌❌

❌ If some problems happens with this steps, please use the steps of "Save"

❌❌ No need to take steps of usual "Hardware Removal"