

 
About Battery life. (Please use rechargeable Battery as possible)
 * Life time would be 8-10 hours with full charged alkaline one)
 * Use Hi-Power or Long Life one. Cheap and unknown makers' ones would be shorter life.
 * Power consumption would be 30% higher at the non-GPS reception. Please switch off at lunch time if possible.
 * 4-2-2-1 hrs would be guideline for 4 battery scales
 * It is recommended to carry spare one for just in case.



Simple & Quick !
Operation Guide

1. Preparation

① Power ON (push longer)



② Auto-Search for Clubs ✘
 (Among Pre-loaded Clubs)



③ Push button if correct



✘ Manual Selection for Clubs by button
 It is useful when a Club has more than 2 x 18 holes.
 ✘ If only one club is preloaded it starts from this display

Please follow "icon button guide" displayed in right bottom in case of trouble

2. To Start Hole

 
① Auto-Search for Courses



② Push button if correct



③ Rotate EX1 with hand grip to figure 8 character to reset magnetic influence



3. 1st shot at Tee Ground (D : Drop Target)



① Hit 1st shot

② Move to fairway

③ Auto-Switch to Green-Center Display

*Distance shows straight and horizontal one viewed from the sky
 *Be sure to wear a strap to prevent EX1 from drop damage

4. Information to Green (C) Center (Default) (F) Front Edge (B) Back Edge



(F)(B) Selection by button



5. 1st Hole Up (Be sure to move on Green)

Auto-Switch for Next Hole

6. 1st Course Up > To Next Course



Take same step as 2-①② at start hole of next course

7. Driving Distance

① Push button at hit point to register the position



② Push again at point reached to show Driving Distance



③ Auto-Switch to Green-Center



 
8. Direction Arrow Check

Hold EX1 with both hands to show arrow to straight up and check target beyond arrow



9. Switching 2 Greens

Push BACK&OK button together to switch



10. Manual Hole Setting
 In case of battery change or power off during play, push [MENU]
 ✘ Please check a Manual in advance to use [MENU]